




195003

EMERGENCY SHOWERS AND EYEWASHES - SHOWERS AND EYEWASH ACCESSORIES

Shower test

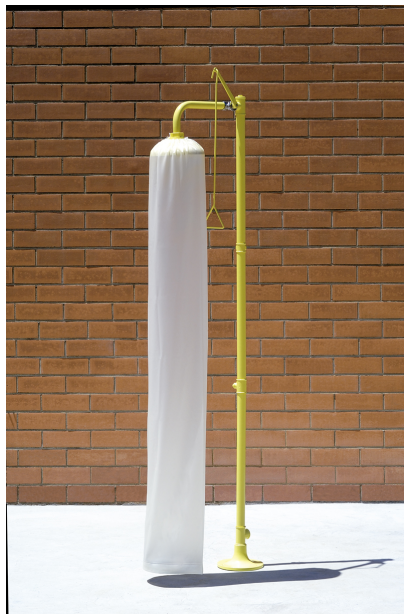

Essential for flow control of the Emergency Shower. Made of plasticized PVC. The operation of the Emergency Showers and Eyewashes should be verified at least ONCE a week in order to guarantee the water supply and to prevent the proliferation of bacteria.